


# NOBO

## LEGS with CASTORS

### How to Attach to Heater

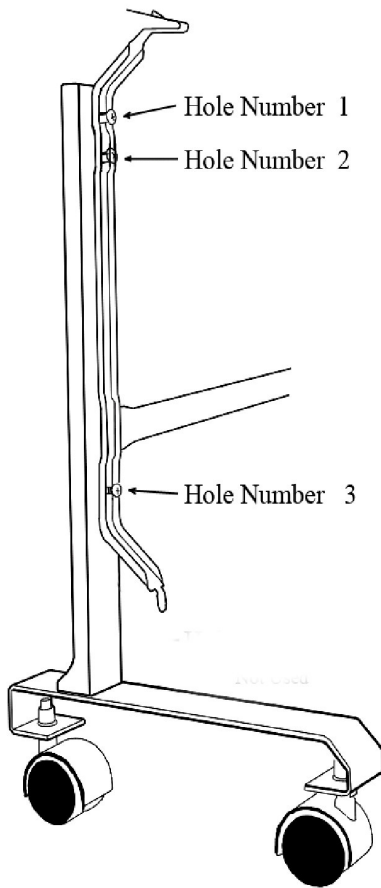

#### **CONTENTS**

Two NOBO legs with two Castors each  
 4 Screws (2 for each leg)  
 (May contain extra screw/s as spares)

#### **INSTRUCTIONS**

1. Remove wall bracket from the back of the heater, by pressing down the two tabs on top of the bracket and pulling it away from the heater. Lift the two bottom legs of the wall bracket away from the heater through slots near the legs.

2 Choose your type of heater

#### **(a) FOR NOBO 400mm HIGH SERIES PANEL HEATERS (including most N, E and T series heaters)**

- I. Using one leg, align the top hole on the bracket with Hole Number 1 and loosely insert screw (as per diagram).
- II. Align bracket with Hole Number 3 and loosely insert second screw.
- III. Tighten both screws securely
- IV. Repeat for other leg.
- V. Reattach wall bracket to heater.

#### **(b) FOR VEETEMP "P" AND NOBO "Q" SERIES CONVECTION PANEL HEATERS**

- I. Using one leg, align the second top hole on the bracket with Hole Number 2 and loosely insert screw.
- II. Align bracket with Hole Number 3 and loosely insert second screw.
- III. Tighten both screws securely.
- IV. Repeat for other leg.
- V. Reattach wall bracket to heater.

HEATER MODELS	TOP HOLE OF BRACKET	BOTTOM HOLE OF BRACKET
To suit all NOBO 400mm high.	Hole No 1	Hole No 3
To suit VEETEMP P and NOBO Q series	Hole No 2	Hole No 3