
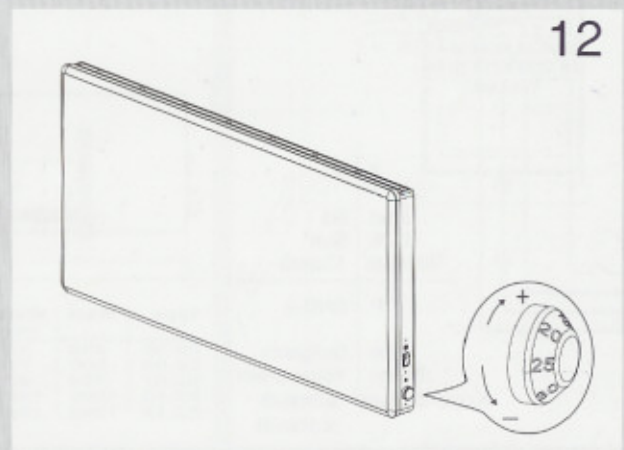
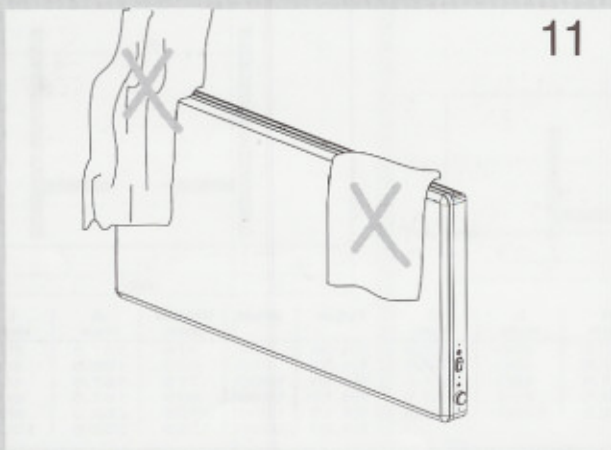
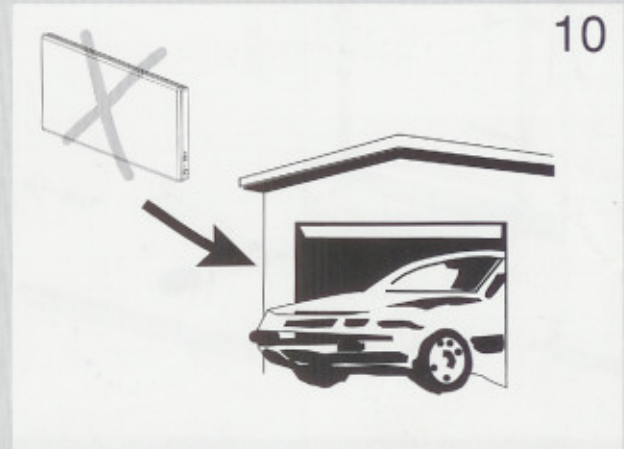


## User instructions ИНСТРУКЦИЯ ПОЛЬЗОВАТЕЛЯ

### E2E/E2EZ/E2X E4E/E4EZ/E4EU/E4M/E4X

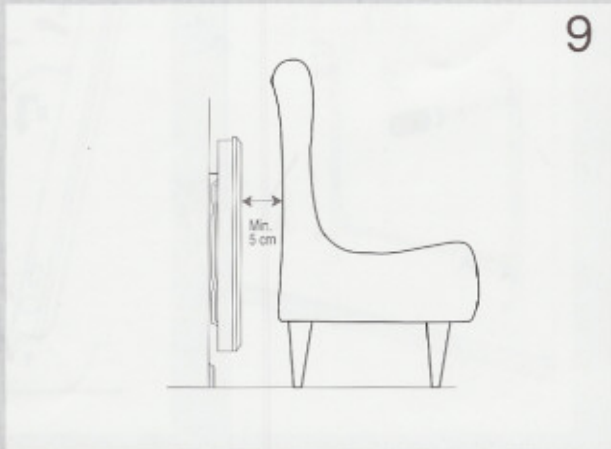

#### Supervision of children.

This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

#### Replacement of supply cord:

If the supply cord is damaged, it must be replaced by a distributor agent or similar qualified person in order to avoid hazard.

#### Наблюдение за детьми.

Это устройство не предназначен для использования маленькими детьми или больными/инвалидами без наблюдения взрослого или ассистента. Маленькие дети должны находиться под наблюдением чтобы исключить их игру с устройством.

#### Замена провода электропитания:

В случае повреждения провода, необходимо заменить его. Замену провода с целью безопасности должен произвести дистрибуторский агент или квалифицированный работник.