


NOBO LEGS

ASSEMBLY INSTRUCTIONS

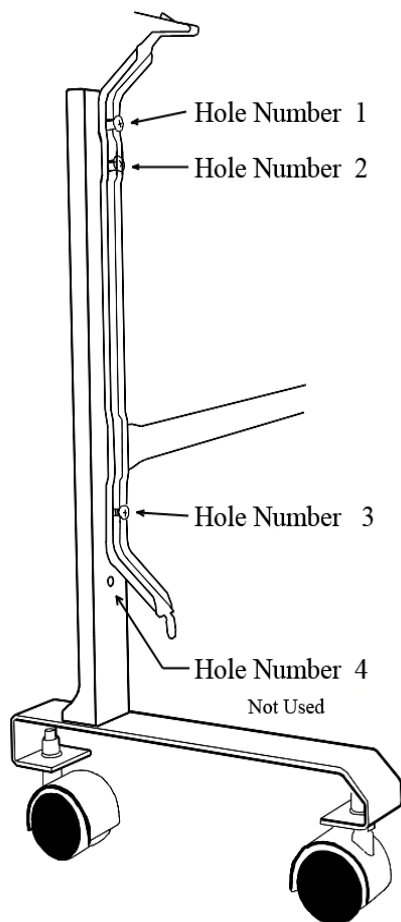

CONTENTS

- 4 Screws (2 for each leg)
- 4 Casters (2 for each leg)
- 2 Legs
(May contain extra screws as spares)

INSTRUCTIONS

1. Screw the casters into the bottom of each leg (2 per leg) and tighten securely with a shifting spanner.
2. Remove wall bracket from the back of the heater, by pressing down the 2 tabs on top of the bracket and pulling it away from the heater. Lift the two bottom legs of the wall bracket away from the heater through slots near the legs.
3. (a) **FOR NOBO 400mm HIGH SERIES PANEL HEATERS (including most N, E and T series heaters)**
 - I. Using one leg, align the top hole on the bracket with Hole No. 1 and loosely insert screw (as per diagram).
 - II. Align bracket with Hole No. 3 and loosely insert second screw.
 - III. Tighten both screws securely
 - IV. Repeat for other leg.
 - V. Reattach wall bracket to heater.
- (b) **FOR VEETEMP "P" SERIES CONVECTION PANEL HEATERS**
 - I. Using one leg, align the second top hole on the bracket with Hole No. 2 and loosely insert screw.
 - II. Align bracket with Hole No. 3 and loosely insert second screw.
 - III. Tighten both screws securely.
 - IV. Repeat for other leg.
 - V. Reattach wall bracket to heater.

HEATER MODELS	TOP HOLE OF BRACKET	BOTTOM HOLE OF BRACKET
To suit all NOBO 400mm high.	Hole No 1	Hole No 3
To suit VEETEMP P series	Hole No 2	Hole No 3